



2

1

B

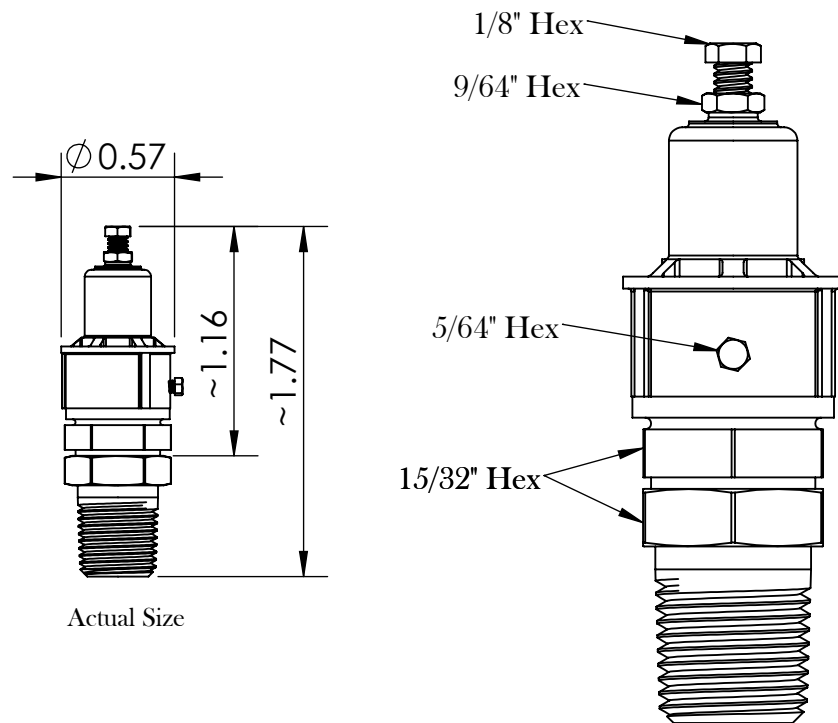

B

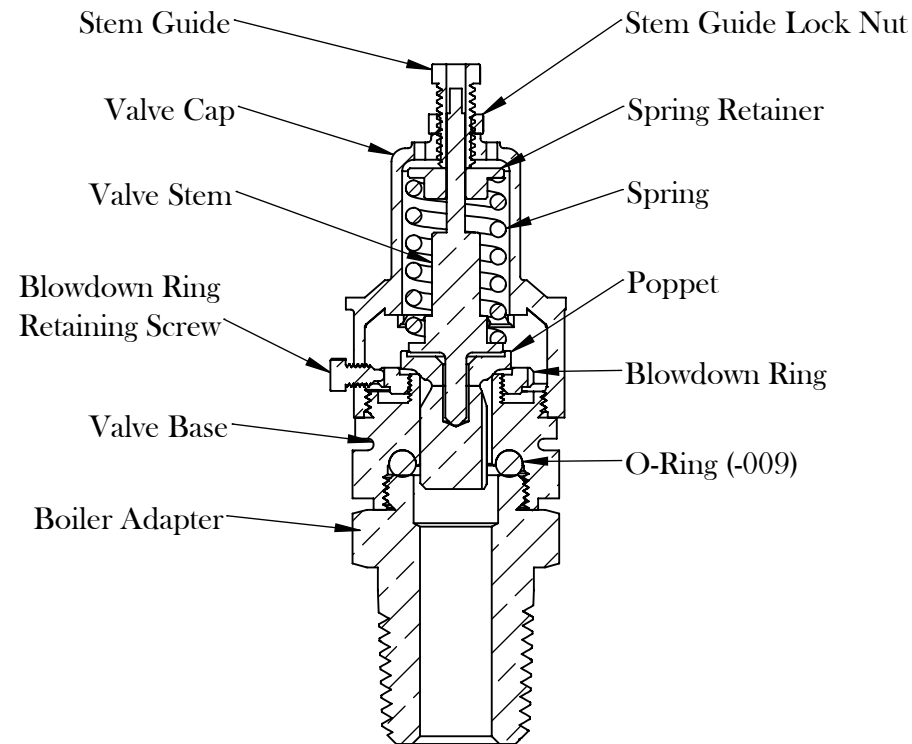

Installation

1 - Separately from the valve, thread in boiler adapter with an 15/32" socket (M10 and M12 adapters use a 12mm socket)

2 - Ensure O-ring is installed inside the valve base

3 - Screw safety valve onto boiler adapter - finger tight is tight enough!

4 - Enjoy!

A

A

Eccentric Engineer

TITLE:

1" Scale Consolidated
Safety Valve

SIZE

A

DWG. NO.

Info Sheet

REV

SCALE: 1:1

WEIGHT:

SHEET 1 OF 1

2

1